

Creating Linear Motion One Step at a Time

Precision Linear Motion Accomplished Easily and Economically

How Is a Linear Actuator Sized?

Sizing a linear actuator is quite easy once you understand the basic needs of the application. The following is the minimum information needed to begin sizing the proper device.

1. Linear force needed to move the load, expressed in Newtons (N)
2. Linear distance the load needs to be moved, expressed in meters (M)
3. Time required to move the load, expressed in seconds (s)
4. Table 1 – illustrated below
5. Performance curves illustrated in Haydon linear actuator catalogs

Power Requirements

The power required to meet the application is now calculated using the parameters above. This will allow the user to easily choose the correct motor framesize needed.

$$P_{\text{linear}} = \frac{\text{(distance traveled in Meters) (force in Newtons)}}{\text{(Time to travel the distance in Seconds)}} = \text{watts}$$

Once the power is known in watts, choose the proper frame size of the actuator as listed in *Table 1*. All stepper motor linear actuators require a drive to send the pulses to the motor. As seen in *Table 1*, the power for both an L/R drive and a chopper drive is listed. Most applications today use an electronic chopper drive. Unless the application is battery-powered (as in a handheld portable device), a chopper drive is highly recommended to get maximum performance from the linear actuator.

Table 1. Frame Sizes and Performance Based On Required Output Power

Hybrid Single Stack					
				Max. Linear Power (watts)	
Series	Size	Max Force (N)	Linear Travel Per Step (microns)	L/R Drive	Chopper Drive
21000	8	45	1.5 – 40	0.3	0.37
28000	11	90	3 – 50	0.27	0.51
35000	14	220	1.5 – 50	0.59	1.5
43000	17	220	1.5 – 50	1.02	2.31
57000	23	880	4 – 50	1.47	6
87000	34	2200	12.7 – 127	N/A	21.19

Hybrid Double Stack					
				Max. Linear Power (watts)	
Series	Size	Max Force (N)	Linear Travel Per Step (microns)	L/R Drive	Chopper Drive
28000	11	133	3 – 50	N/A	1.14
35000	14	220	15.8 – 127	N/A	2.7
43000	17	350	15.8 – 127	N/A	4.62
57000	23	880	12.7 – 127	N/A	10.08

Canstack					
				Max. Linear Power (watts)	
Series	Size	Max Force (N)	Linear Travel Per Step (microns)	L/R Drive	Chopper Drive
15000	15mm	7	20	0.025	0.03
20000	20mm	16	25 – 100	0.05	0.06
Z20000	20mm	35	25 – 100	0.09	0.23
26000	26mm	50	6 – 100	0.17	0.18
Z26000	26mm	80	6 – 100	0.18	0.48
36000	36mm	160	3 – 100	0.23	0.69
46000	46mm	260	12.7 – 400	0.55	1.13

Velocity

After calculating the mechanical power needed to meet the application requirements, the linear velocity in inches per second is calculated using the following equation:

$$\text{Velocity}_{\text{linear}} = \frac{\text{required travel distance (in)}}{\text{Time to achieve travel (s)}} = \text{in} / \text{s}$$

Force vs. Linear Velocity Curves

Once the required actuator frame size is determined and the linear velocity is calculated, the “force vs. linear velocity curve” is used to determine the proper resolution of the actuator lead screw.

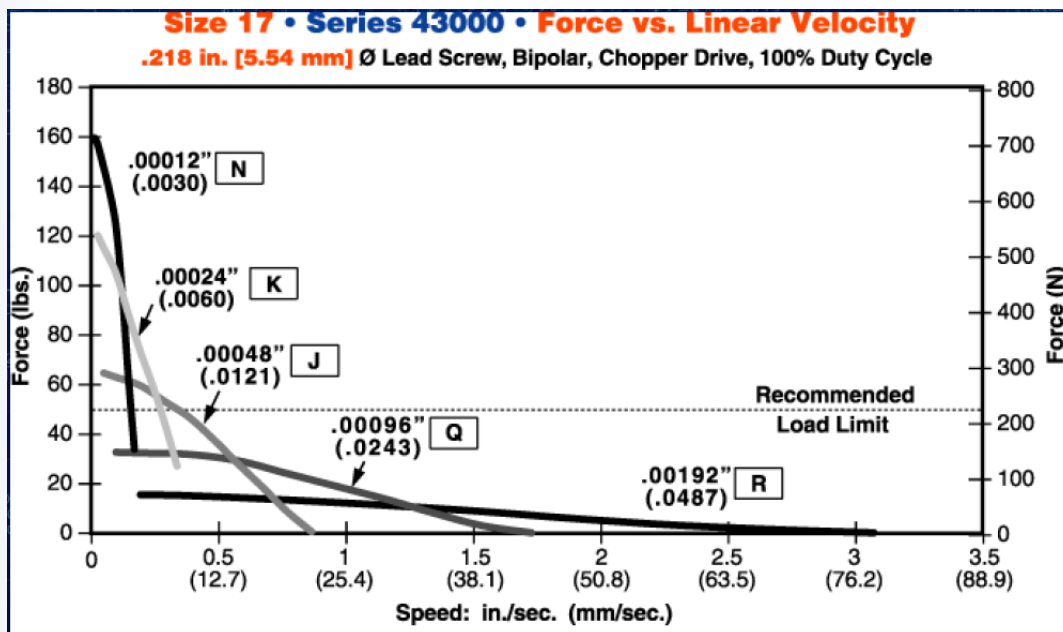


Figure 7. Size 17 Actuator - Force vs. Linear Velocity Chart

Actuator Life

There are many variables that ultimately determine life of the actuator. The best way to predict life is through application testing, which is highly recommended. There is, however, a first approximation technique that can help estimate this value. The stepper-motor prime mover contains no brushes to wear out and also utilizes precision, long-life ball bearings. The main wear component is the power nut. The number of cycles can be summarized as a function of load, as illustrated in Figure 8 below.

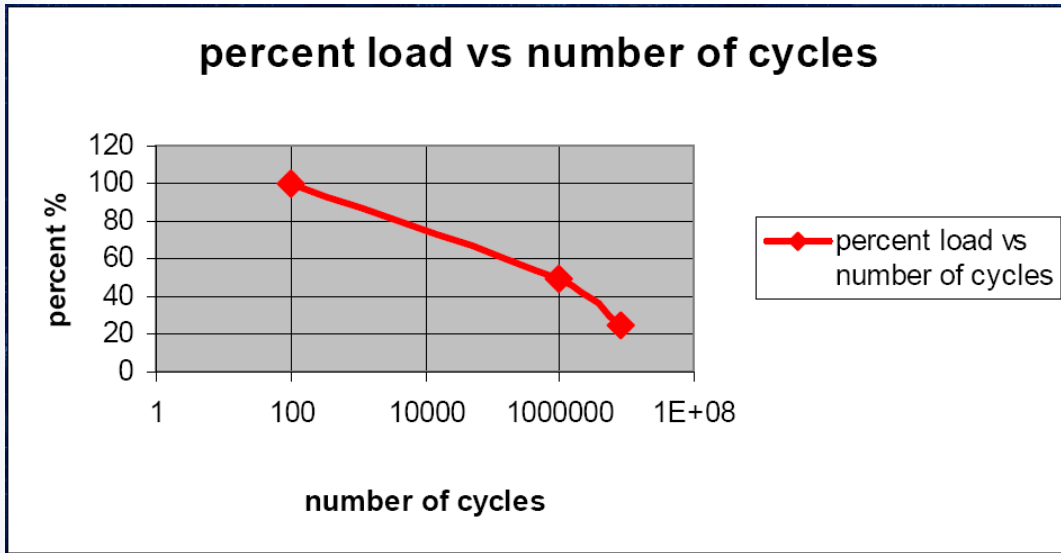


Figure 8. Cycles on a Standard Stroke Actuator as a Function of % Max Load

Example #1

Application Requirements:

- Req'd Force (lbs) = 15 lbs
- Req'd Travel (in) = 3 in
- Time To Achieve Travel (s) = 6s
- Desired Cycles = 1,000,000
- Linear Velocity (in/s) = 3 in / 6 s = 0.5 in/s

COMPUTATION: Calculate the initial rated force based on required # of cycles:

Step 1:

Refer to *Figure 8* and determine the correct sizing factor needed in order for the actuator to achieve the required 1,000,000 cycles. This is illustrated with the yellow line in *Figure 9* below.

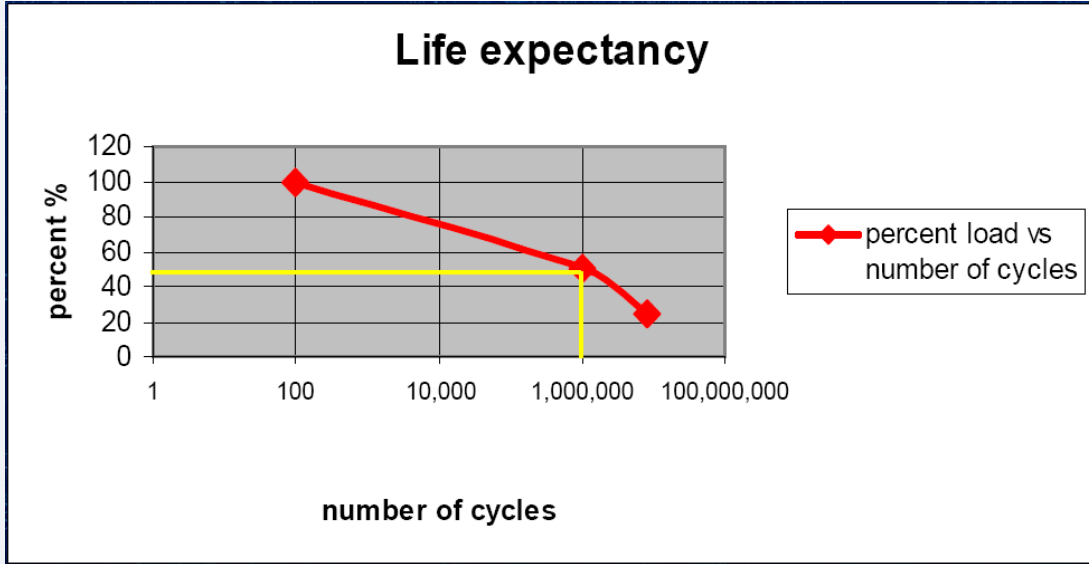


Figure 9. Safety Factor Needed To Meet 1,000,000 Cycles

Step 2:

As indicated in the chart, in order to get 1,000,000 cycles, a factor of 0.5 must be used when sizing the actuator.

The initial rated force required in order to meet the load after 1,000,000 cycles is therefore...

$$15 \text{ lbs} / 0.5 = 30 \text{ lbs}$$

Step 3:

Convert lbs to Newtons (N)

$$30 \text{ lbs} / (0.225 \text{ lbs} / \text{N}) = 133 \text{ N}$$

COMPUTATION: Determine required travel in meters

$$3 \text{ in} \times (0.0254 \text{ M} / \text{in}) = 0.0762 \text{ M}$$

COMPUTATION: Choose the proper frame size actuator using the selector chart

Step 1:

Determine the required linear mechanical power in watts

$$P_{\text{linear}} = (133\text{N} \times 0.0762\text{M}) / 6\text{s} = 1.7 \text{ N-M} / \text{s} = \mathbf{1.7 \text{ watts}}$$

Step 2:

Use *Table 1* to determine the correct frame size actuator. As discussed earlier in the article, most applications will use a chopper drive to supply the required input pulses to the stepper motor. The 43000 (Size 17 Hybrid) was chosen for this application, as highlighted in the "Hybrid Single Stack" section of *Table 1*.

Hybrid Single Stack						
					Max. Power; watts	
Series	Size	Max Force (N)	Linear Travel / Step (micro)	L/R	Chopper	
21000	8	45	1.5 – 40	0.3	0.37	
28000	11	90	3 – 50	0.27	0.51	
35000	14	220	1.5 – 50	0.59	1.5	
43000	17	220	1.5 – 50	1.02	2.31	
57000	23	880	4 – 50	1.47	6	
87000	34	2200	12.7 – 127	N/A	21.19	

COMPUTATION: Determine the proper resolution using the “Force vs Linear Velocity” chart

As determined by the life calculation performed above, an initial load of 30 lbs is to be moved at a velocity of 0.5in/s. The resulting lead screw resolution required in the Size 17 hybrid motor is 0.00048” (J resolution), as indicated in Figure 10 below.

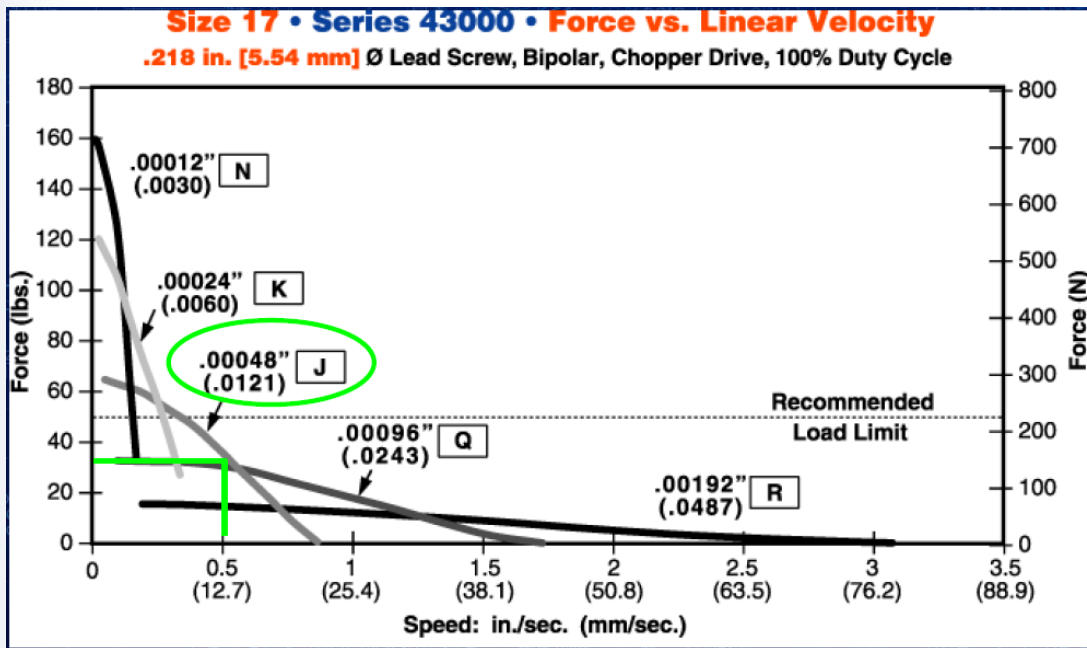


Figure 10. Lead screw resolution required in the Size 17 hybrid motor is 0.00048” (J resolution), as indicated.

COMPUTATION: Verify selection by checking force at the required step rate

Earlier in the paper, it was discussed that the lead screw advances based on the number of input steps to the motor. Haydon performance curves are expressed in both “in/sec” (as illustrated in *Figure 10*) and also in “steps/sec” (*Figure 11*). As an effective check, verify the selection by checking the force at the required step rate.

Resolution chosen 0.00048 in/step (“J” screw)
 Req’d linear velocity 0.5 in/s
 Req’d step rate (0.5 in/s) / (0.00048 in/step) = 1041 steps/s

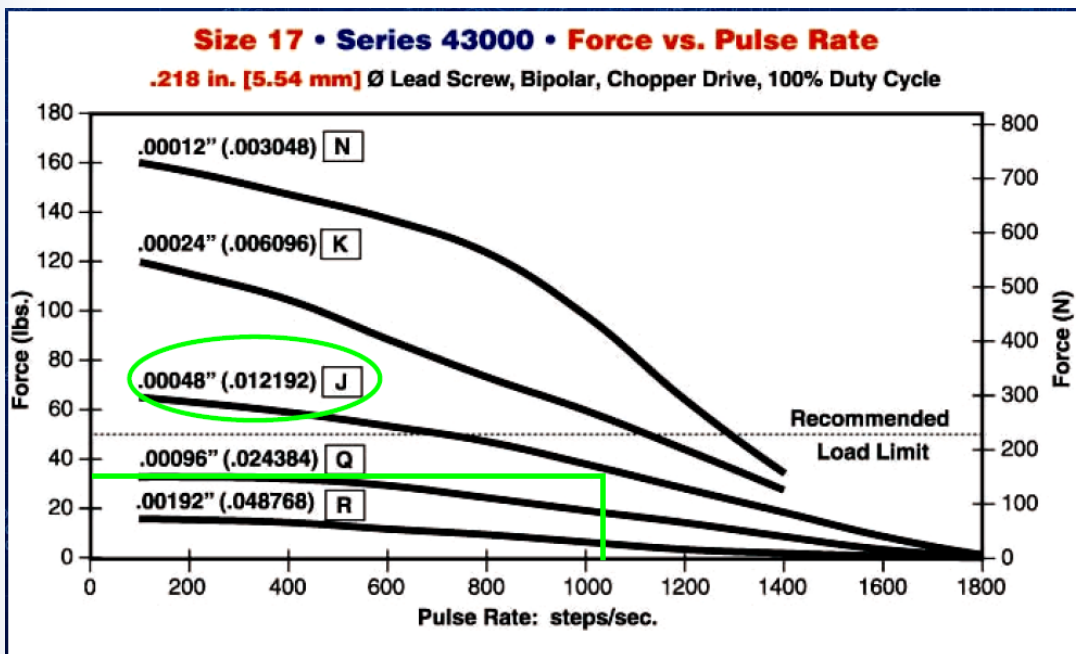


Figure 11.

Figures 10 and 11 are good illustrations of how the pulses to the stepper motor translate into linear motion through the lead screw.

Conclusion

Through the use of stepper motor-based linear actuators, rotary-to-linear motion takes place inside the motor itself. This method offers unique advantages over alternative approaches, such as fewer components, smaller overall footprint size, high force output, and long stroke lengths. What’s more, the high precision, repeatability, long component are especially attractive, as are the high resolutions possible.

In addition, the use of the stepper motor translates to a lower overall cost for OEM equipment builders in terms of development and production. Most importantly, this method can be utilized in a variety of vertical markets, including medical, laboratory instrumentation, semiconductor, aerospace, and virtually any other application where precision linear motion is required.

About Haydon Kerk Motion Solutions

Haydon Kerk Motion Solutions is the joining of two world class brands in the field of linear motion; Haydon™ and Kerk®. Together, the company now offers a broad range of precision linear motion products. Recognized as a leading manufacturer of stepper motor based linear actuators, rotary motors, lead screw assemblies, and linear rail and guide systems used in niche market applications, Haydon Kerk Motion Solutions offers high performance with its range of reliable, precise designs. Haydon Kerk Motion Solutions has developed industry-renowned brands built upon its technical innovation, versatility, customization, product durability, and dedicated customer service. For more information, please visit our website at <http://www.HaydonKerk.com>.